

Exp no :05

Date :

Use Autopsy to create a case and import evidence

Description

Autopsy is an open-source digital forensics platform used for analyzing and extracting data from digital devices. Here's a step-by-step process on how to use Autopsy for a basic forensic investigation:

Drive link:

https://drive.google.com/drive/u/1/folders/1lSFY7Tqn2L7AjQGhq8yJ8kixc_xTU-v

Download files: 4Dell Latitude CPi.E01, 4Dell Latitude CPi.E02

1. Installation

- **Download and Install:** Autopsy can be downloaded from the official website. Follow the installation instructions based on your operating system (Windows, Linux, or macOS).



[DOWNLOAD](#) [ADD-ON MODULES](#) [COMMUNITY & SUPPORT](#) [ABOUT](#) [BLOG](#)

Download and Register

LINUX AND MACOS DOWNLOAD

To run on Linux and macOS:

- Download the Autopsy [ZIP file](#)
- Linux will need The Sleuth Kit [java .deb](#) Debian package
- Follow the [instructions](#) to install other dependencies


WINDOWS DOWNLOAD

3RD PARTY MODULES

3rd party add-on modules can be found in the [Module github repository](#).

2. Starting a New Case

- **Open Autopsy:** Launch the application after installation.
- **Create a New Case:**
 - Click on New Case.
 - Enter the case name and location where the case data will be stored.
 - Fill in the details like the case number, examiner's name, etc., and click Next.

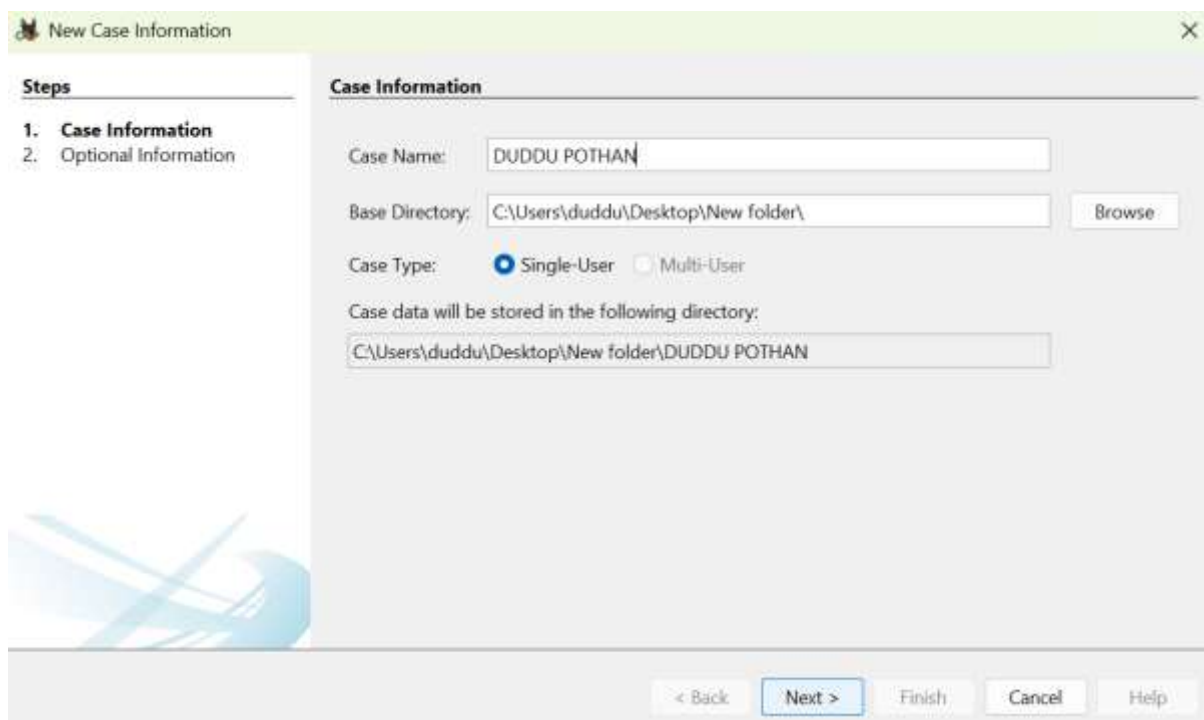

The 'New Case Information' dialog box has a green title bar and a sidebar on the left with 'Steps' listed: '1. Case Information' and '2. Optional Information'. The main area is titled 'Case Information' and contains the following fields and controls:

- Case Name:** A text field containing 'DUDDU POTHAN'.
- Base Directory:** A text field containing 'C:\Users\duddu\Desktop\New folder\' with a 'Browse...' button to its right.
- Case Type:** Two radio buttons: 'Single-User' (selected) and 'Multi-User'.
- Case data will be stored in the following directory:** A text field containing 'C:\Users\duddu\Desktop\New folder\DUDDU POTHAN'.

At the bottom, there are five buttons: '< Back', 'Next >' (highlighted in blue), 'Finish', 'Cancel', and 'Help'.

New Case Information

Steps

1. Case Information
2. **Optional Information**

Optional Information

Case

Number: 99240041354

Examiner

Name: DUDDU POTHAN

Phone: 7893668977

Email: duddupothan@gmail.com

Notes:



Organization



Organization analysis is being done for: Not Specified Manage Organizations


< Back Next > Finish Cancel Help

3. Adding a Data Source

- **Choose the Type of Data Source:**
 - After creating a case, you'll be prompted to add a data source.
 - You can add disk images, directories, logical files, or local disks.
- **Select the Data Source:**
 - Browse to the location of the image file (e.g., .E01, .dd, or .raw), physical disk, or directory you want to analyze.
 - <https://drive.google.com/drive/u/1/folders/1lSFY7Tqn2L7AjQGhq8yJ8kixcxTU-v>
- **Configure Ingest Modules:**
 - Autopsy allows you to select specific analysis modules such as File Type Identification, Keyword Search, Hash Lookup, etc.
 - You can enable or disable these based on your investigation needs.
- **Start Analysis:** Click Next to start the analysis.

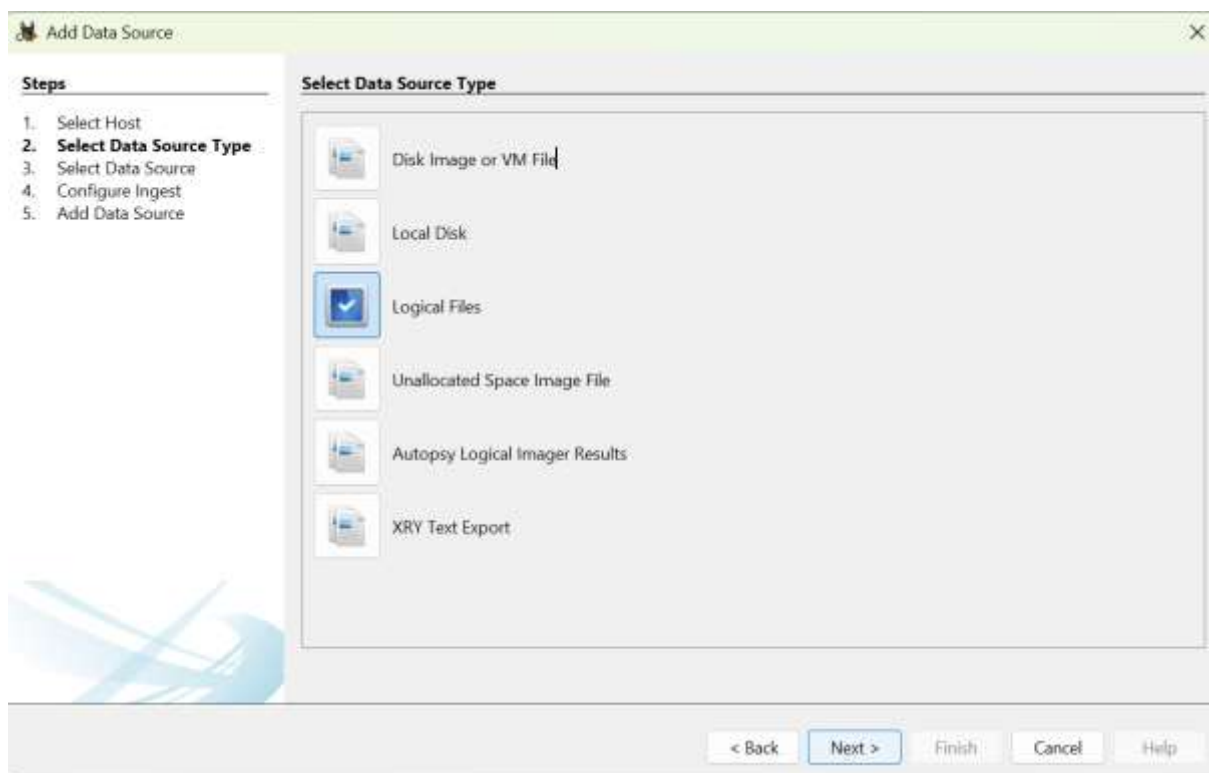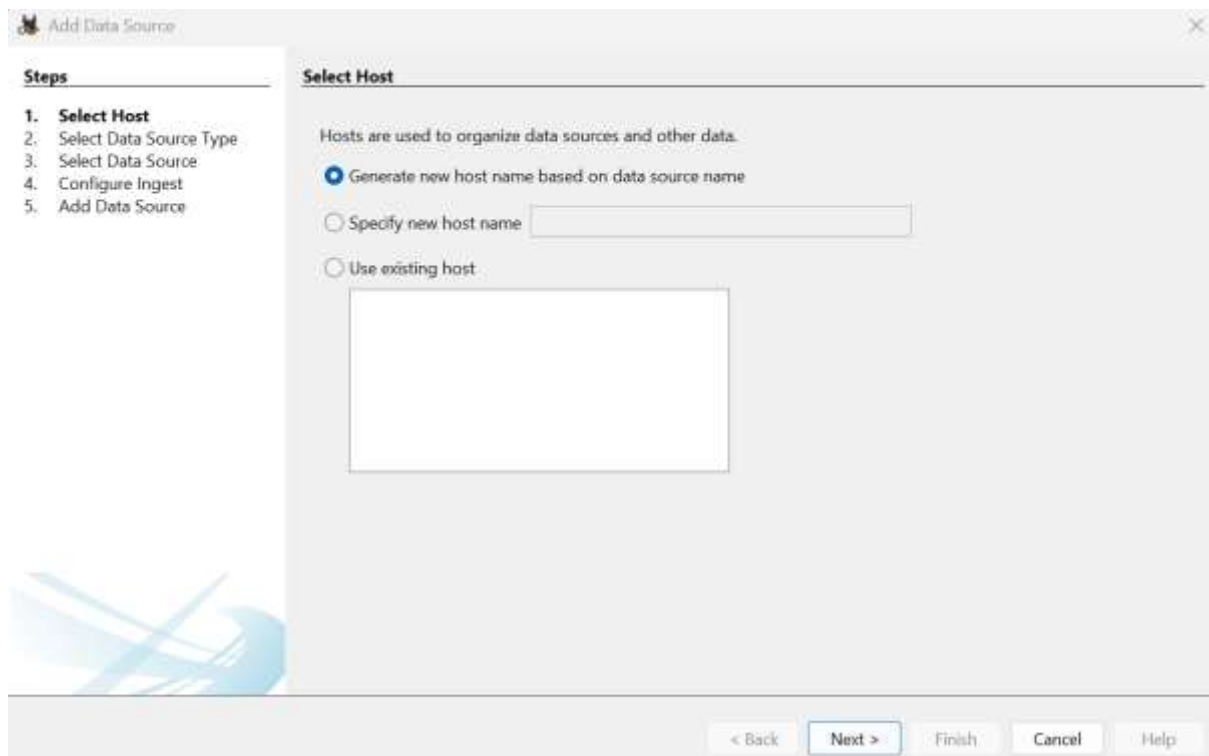

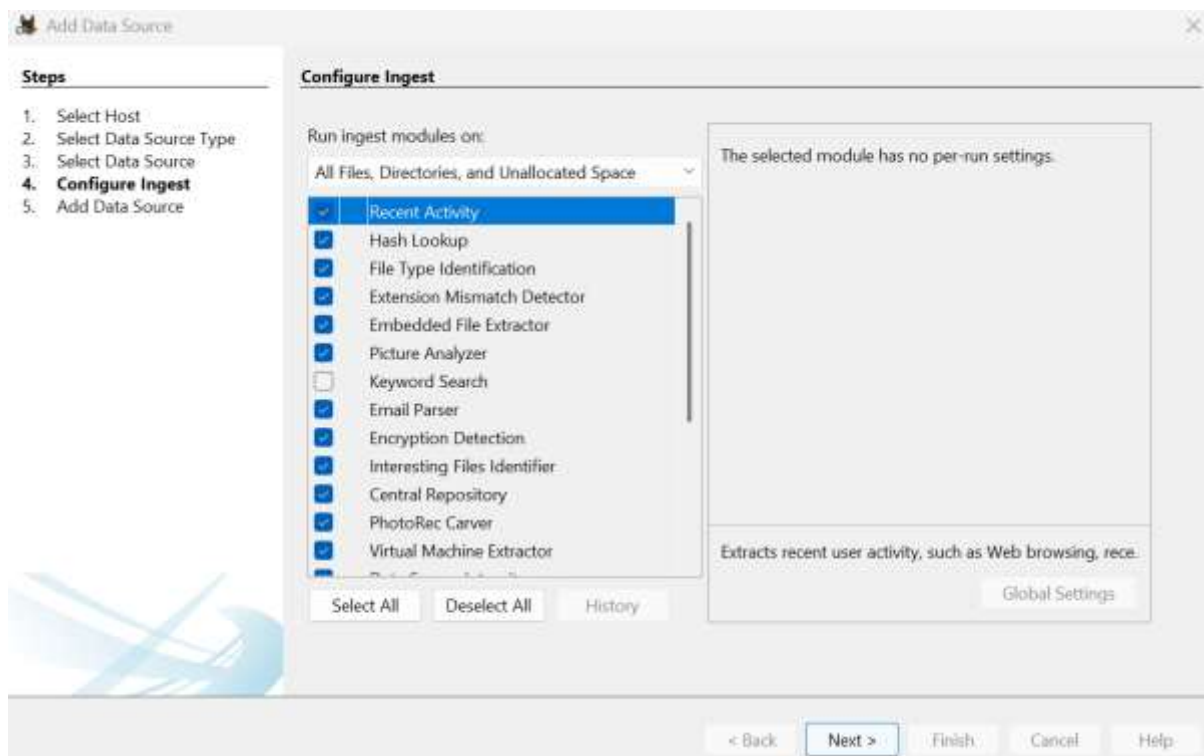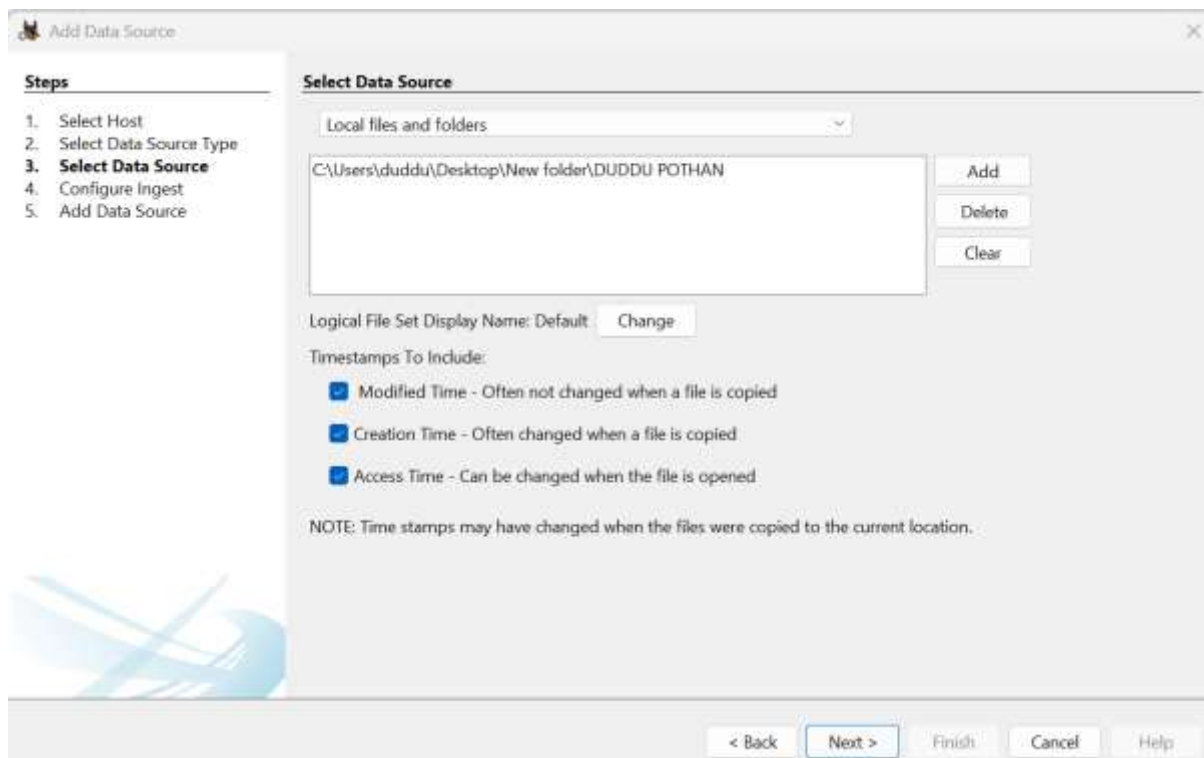

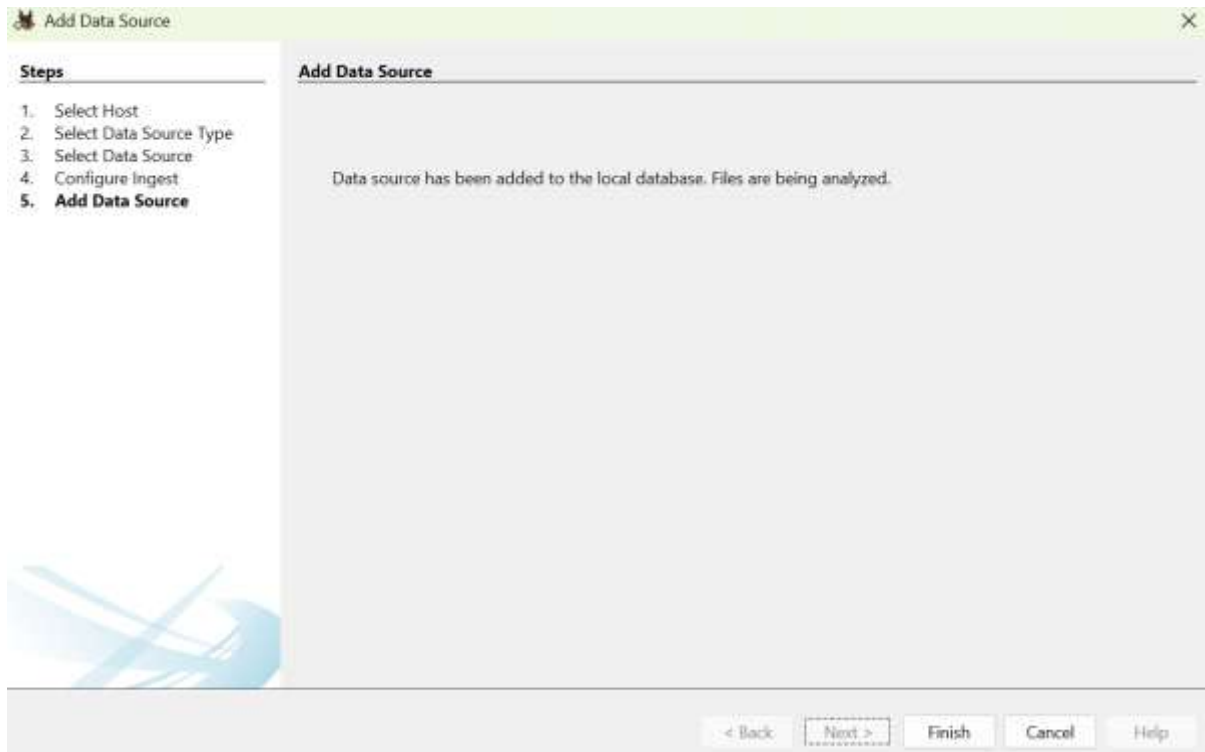


4. Initial Analysis and Overview

- **Ingest Progress:** As Autopsy processes the data source, you'll see the progress in the lower-left corner.
- **Explore the Resulting Artifacts:**
 - Autopsy automatically categorizes findings such as web artifacts, file system metadata, and communication records.
- **Use the Tree Viewer:**
 - On the left pane, you'll see a tree structure where you can explore different aspects like File System, Web History, Email, etc.

5. Detailed Analysis

- **Keyword Search:**
 - You can perform specific keyword searches using the Keyword Search module.
 - Use pre-configured lists or enter custom keywords.
- **File Analysis:**
 - Navigate through files and folders under the File Types or File System section.
 - Open, view, or export files for further examination.
- **Timeline Analysis:**

- Use the Timeline module to visualize events based on timestamps.
- This can help track user activity over time.
- **Hash Analysis:**
 - Compare file hashes with known databases to identify known good or bad files.

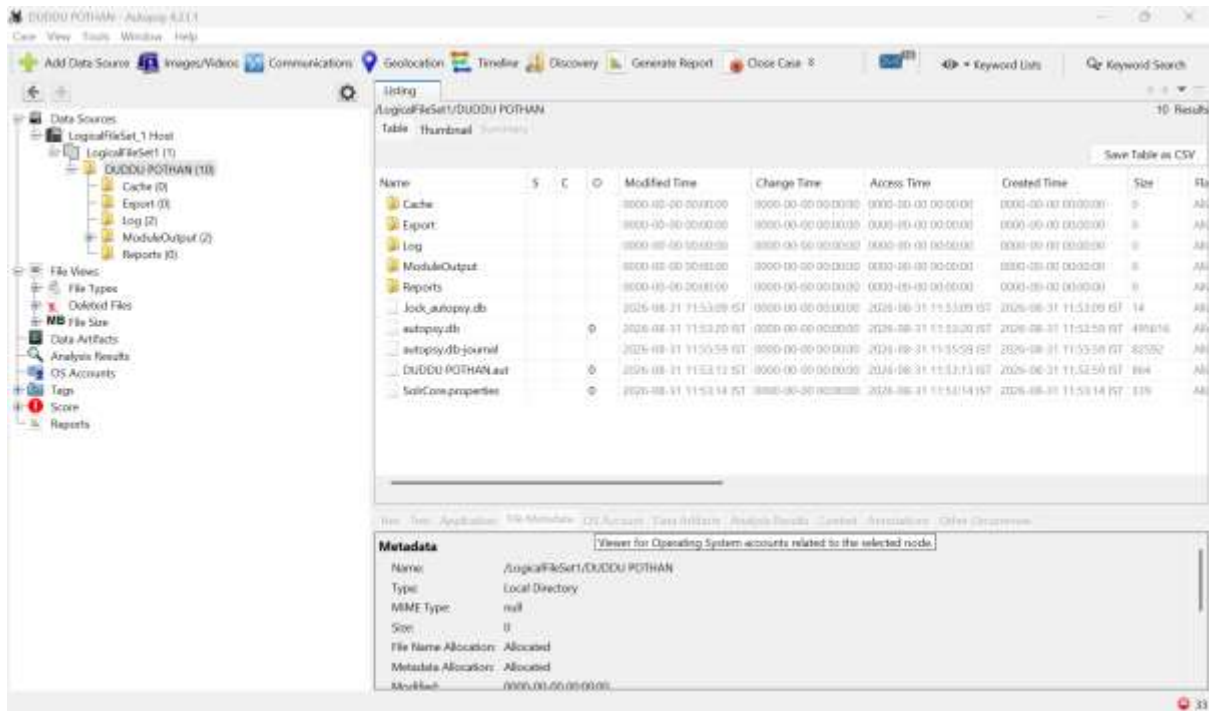

6. Reporting

- **Generate a Report:**
 - After analyzing the data, click on Generate Report from the toolbar.
 - Choose the type of report (HTML, CSV, Excel, etc.).
 - Select which parts of the analysis you want to include in the report.
- **Export Findings:**
 - Export individual files or artifacts that you need for your report or further analysis.
- **Final Review:**
 - Review the report to ensure it includes all relevant information.
 - Save or print the report for use in your case.

Generate Report

Select and Configure Report Modules

Report Modules:

- ☒ HTML Report
- ☐ Excel Report
- ☐ Files - Text
- ☐ Data Source Summary Report
- ☐ Save Tagged Hashes
- ☐ Extract Unique Words
- ☐ TSK Body File
- ☐ Google Earth KML
- ☐ CASE-UCO
- ☐ Portable Case

A report about results and tagged items in HTML format.

Header:

Footer:

< Back Next > Finish Cancel Help

Report Generation Progress...

Complete

HTML Report : C:\Users\duddu\...Reports\DUDDU POTHAN HTML Report 08-31-2026-11-57-09\report.html

Complete

Cancel Close

Report Navigation

- Case Summary
- Tagged Files (0)
- Tagged Images (0)
- Tagged Results (0)

Autopsy Forensic Report

Case: DUCOU POTIUM

Case Number: 89240041354

Number of Data Sources: 1

Estimate: DUCOU POTIUM

Image Information:

Image Information

Software Information:

Autopsy Version:	4.23.1
Android Analyzer Module:	4.23.1
Android Analyzer (JLEAPP) Module:	4.23.1
Control Repository Module:	4.23.1
DJI Drone Analyzer Module:	4.23.1
Data Source Integrity Module:	4.23.1
Email Parser Module:	4.23.1
Embedded File Extractor Module:	4.23.1
Encryption Detection Module:	4.23.1
Extension Mismatch Detector Module:	4.23.1
File Type Identification Module:	4.23.1
GPX Parser Module:	1.2
Hash Lookup Module:	4.23.1
Interesting Files Identifier Module:	4.23.1
PhotoRec Carver Module:	7.0
Picture Analyzer Module:	4.23.1
Recent Activity Module:	4.23.1
Virtual Machine Extractor Module:	4.23.1
YARA Analyzer Module:	4.23.1
iOS Analyzer (JLEAPP) Module:	4.23.1

Ingest History:

Job 1:

Data Source:	LogicalFileSet1
Status:	COMPLETE
Enabled Modules:	- Recent Activity - Hash Lookup - File Type Identification - Extension Mismatch Detector - Embedded File Extractor - Picture Analyzer - Email Parser - Encryption Detection - Interesting Files Identifier - Control Repository - PhotoRec Carver - Virtual Machine Extractor - Data Source Integrity - Android Analyzer (JLEAPP) - DJI Drone Analyzer - YARA Analyzer - iOS Analyzer (JLEAPP) - GPX Parser - Android Analyzer



Generated by Autopsy Open Source Digital Forensics Platform - www.autopsy.org

7. Case Closure

- **Close the Case:**
 - Once you have completed your investigation, close the case within Autopsy.
- **Archiving:**
 - Ensure all data and reports are properly archived according to your organization's policies.

8. Advanced Features (Optional)

- **Custom Ingest Modules:**
 - Autopsy allows for custom modules to be added if you need specific analysis tools not included by default.
- **Collaboration:**
 - Autopsy can be configured for multi-user cases if you're working in a team environment.